



## WT 2 Stop



- Fixed stop in the transverse conveyor
- Installation location: ST 2/... section, BS 2/... belt section

[PDF](#) Assembly instructions

- Not suitable for mounting on ST 2/...-H or BS 2/...-H sections

## Product description

Rockers are used for the following areas:

- For area monitoring
- As a stop for transverse conveying of workpiece pallets
- For workpiece pallet recognition

Depending on the desired function, WI/M, WI 2/... rockers should be fitted with one or two sensors.


The WT 2 stop is used as a fixed stop for workpiece pallets entering a longitudinal section from a transverse one.

## Technical data

|                |  |                                                     |
|----------------|--|-----------------------------------------------------|
| No.            |  | 3842519717                                          |
| ESD            |  | yes                                                 |
| Material entry |  | Stop: PA 6<br>Fastening material: Steel, galvanized |

## Dimensions

### Stop

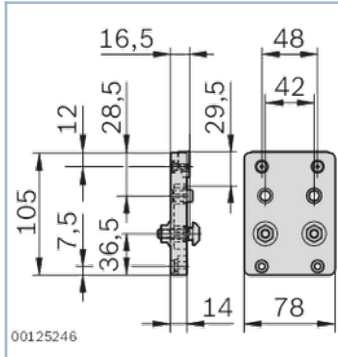

## Ordering codes

|          | No.        |
|----------|------------|
| Stop N10 | 3842519717 |