


Frequency Converter (FU) accessories

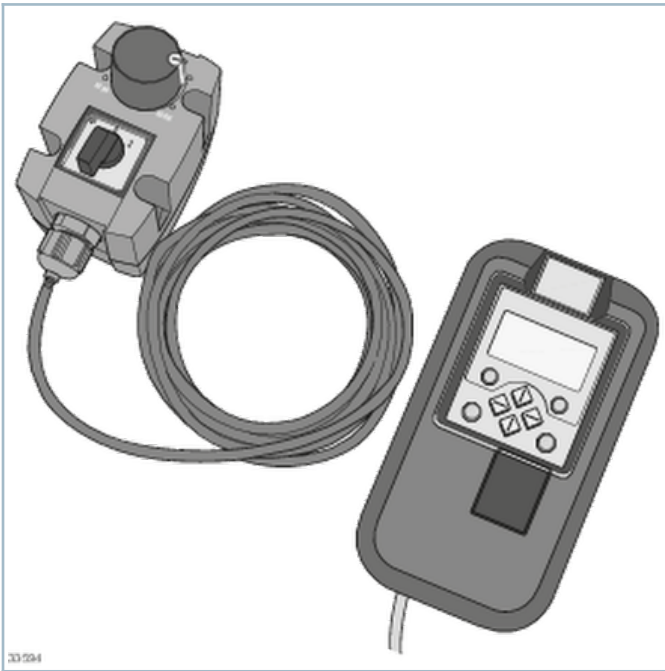

- Manual control unit
- Switch /potentiometer unit

Product description

The switch /potentiometer unit is used to fine-tune the transport speed within a range that has been preset with the manual control unit. The switch /potentiometer unit is connected to the frequency converter by a cable.

The drive can be started or stopped with the rotary switch.

The manual control unit is required for the parameterization of drives with frequency converters.

In addition, you can:

- Control (e.g. block and release)
- Display operating data
- Steplessly regulate the transport speed
- Transfer parameter sets to other basic devices

Information

Note: It is imperative that the direction in which the roller conveyor is running is checked prior to start-up.

Delivery notes

Scope of delivery

Incl. 2.5 m connection cable

Ordering codes

	No.
Manual control unit	3842552821
Switch /potentiometer unit	3842553184